## ESTEEM<sup>™</sup> *Soft* Convex

## HOW TO USE THE CLIPLESS TAIL CLOSURE

1 CLOSING THE POUCH




**Step 1:** Holding the outlet end strips, fold the end up towards you until the interlocking closures line up.



**Step 2:** Press the interlocking closures together across the width of the tail. Press and pinch across the closure until you feel them close.



Step 3: Place finger under the gap below the fabric and tuck in the closure, if desired.

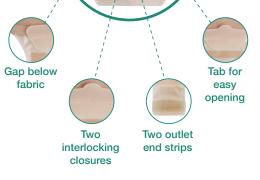



## **2** EMPTYING AND CLEANING THE POUCH



Step 1: Remove closure from the gap below the fabric.



**Step 2:** To empty the pouch, tilt the tail up towards your body. Peel open the closure and unfold the tail.



**Step 3:** Holding the pouch tail with one hand, open the tail by pushing in both ends of the outlet end strips with the other hand to drain the pouch.

Tip: You can pull up on the tab to help open the tail.



**Step 4:** Clean the inside surface of the pouch tail with toilet tissue or a wipe. The pouch tail can also be cleaned gently with pH neutral soap and water.

**For more information, call us on - XXXX XXXX XXXX** Please refer to the package insert for complete instructions for use.

